

# Updated Feature Information Sheet

The following convenience features were updated after the printing of the included User's Manual.

## Slow Cook temperatures adjusted as

- **Normal** mode: 87.8~93°C/190~200°F (as in the **Normal** mode in conventional slow cookers)
- **More** mode: 93~99°C/200~210°F (as in the **High** mode in conventional slow cookers)
- **Less** mode: 82~87.8°C/180~190°F (as in the **Low** mode in conventional slow cookers)

## Audible beeping On/Off

- Beeping is **On** in the factory settings
- To turn beeping **Off**, press and hold the “-“ button for 3 seconds. The LED screen shows “**S OFF**” as in “Sound Off”.
- To turn the beeping back **On**, press and hold the “+“ button for 3 seconds. The LED screen shows “**S ON**” as in “Sound On”.
- Note: Beeping is always **On** in any error conditions.

## Auto Keep Warm On/Off

- Auto **Keep Warm** is **On** in the factory settings, when a cooking program button is pressed.
- Auto **Keep Warm** can now be toggled **On** and **Off** by a second press on the same cooking program button, BEFORE the cooking program starts. During this period, the **Keep Warm** button indicator becomes **On** or **Off** corresponding to the toggling action.

## Memorizing the last used program settings per cooking program button

- The previously used cooking settings, including time, pressure and temperature, are stored once the custom settings are defined, and even after the Instant Pot cooker is unplugged from power.
- To reset to factory default settings, press and hold the “**Adjust**” button for 3 seconds, when the Instant Pot cooker is in the **Off** mode.